

SOMNIUM LATEX



| HEAD ZONE | SHOULDER ZONE | LOWER BACK ZONE | HIP ZONE | THIGH ZONE | CALF ZONE | FOOT ZONE |
|---|---|--|---|--|--|--|
| Intermediate support area, for the correct support to the head. | Softer area, provided with convoluted surface and triple side perforations, to significantly improve the shoulder cushioning. | Supporting and elastic area, capable of sustaining the lower back. | Controlled hip cushioning is made possible by the drilled cone surface pattern. | Elastic and supporting area, capable of sustaining the body. | Relatively soft area, designed to support calves without compressing them. | Intermediate support level, for proper feet support. |

For mattresses with removable covers, the differing pinhole depths on either side of the structure result in two comfort levels: medium-soft and medium (bi-comfort).



Removable cover

With non-removable cover, medium comfort level only.



Non-removable cover

The centre of the structure shaped with truncated hol-low cones, the horizontal micro-pinholes, and the side through perforations allow for a significant air flow in-side the mattress, favouring the dispersion of accumulated perspiration. Furthermore, they make the mat-tress easy to bend and thus suitable for adjustable bases.

| LATEX MATTRESSES WITH REMOVABLE COVER | | LATEX MATTRESSES WITH NON-REMOVABLE COVER |
|---------------------------------------|--|---|
| Ergonomic seasonal SILENZIO | Ergonomic hypo-allergenic SOLLIEVO DISTESO | Ergonomic seasonal SOSPIRO |